

Dirty CD's and DVD's can cause loss of picture quality and disc jumping when played through your equipment. This manual disc cleaner will clean dirty CD's and DVD's with just a few turns. Radial cleaning is the best cleaning method because the disc and the cleaning pad is rotated across the disc surface rather than around it. Removes any dirt and fingerprints which may cause problems when reading the disc. Supplied with 3 cleaning pads and 20ml cleaning solution bottle.